


1. Slide Part ① onto the lens hood.



2. Move the Tripod collar away.



3. Slide Part ② onto the lens from the rear end toward the front end.

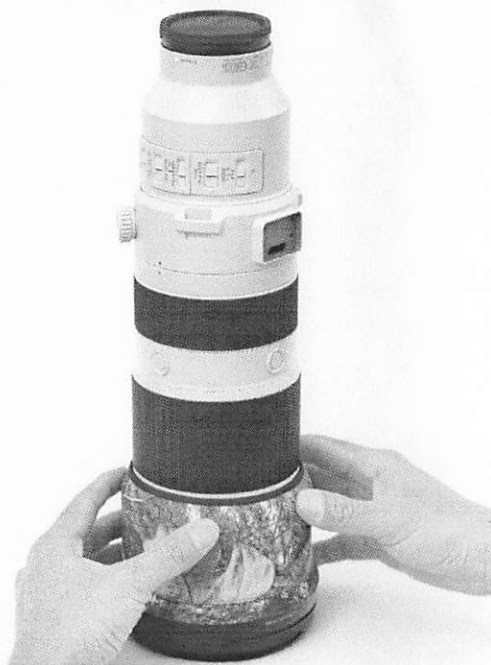

4. Slide Part ③ onto the zoom ring.




5. Wrap Part ④ around the area between the focus ring and zoom ring, then secure it with the Velcro. Align the openings on the cover with the buttons.



6. Wrap Part ⑤ around the focus ring of the lens.



7. Slide the base protective cover onto the base.

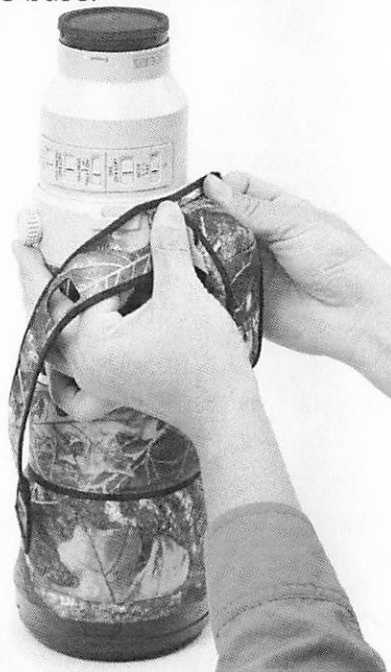

8. Wrap Part ⑥ around the tripod collar, then secure it by fastening the Velcro.



9. Slide Part ⑦ over the rear end of the lens.

