

# Canon RF 200-800mm F/6.3-9 IS USM 镜头炮衣安装图


ROLNAPRO 若兰炮衣

各部分炮衣安装方法:

Installation Instructions:

将⑨号炮衣由镜头尾端套入。

Slide the lens coat ⑨ from the rear end of the lens.

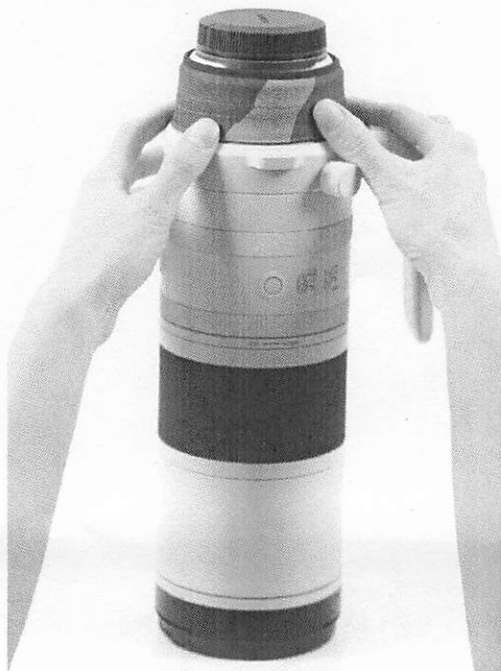

将⑧号炮衣方形开口和底座护套同时套入底座，再将炮衣围到支架环，粘合魔术贴。  
Start by inserting the square opening of the lens cover ⑧ and the base cover simultaneously into the base. Then wrap the lens cover around the tripod collar ring and fasten it with the Velcro.



将⑦号炮衣由镜头前端缓慢向下套入到控制环上。

Slide the lens cover ⑦ from the front of the lens towards the Control ring.



按⑥控制开关、⑤阻尼环、④变焦环、②镜头前端的顺序依次将炮衣套入。


注意④号炮衣凹口要对准变焦环刻度标尺,避免遮挡数字。

Slide the lens cover ⑥, ⑤, ④, and ② in sequence. Making sure that the notch on ④ aligns with the scale.



将遮光罩扣在桌面上，取①号炮衣对准按钮位置，用力将炮衣套入。(炮衣采用防滑内衬，尺寸偏紧，请耐心安装)

Place the lens hood on a flat surface. Align the lens cover ① with the corresponding button location and firmly slide it into place. (The lens cover is designed with an anti-slip lining and may fit snugly, so please be patient during installation.)

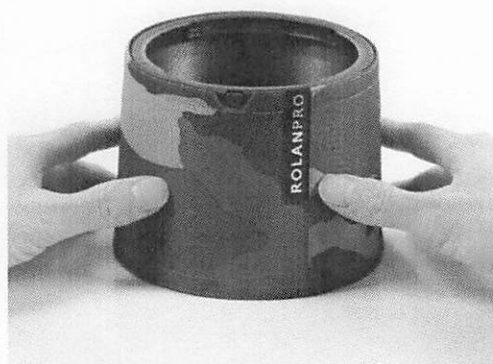

③号部件仅在镜头伸长时安装。

The lens cover ③ is used only when the lens is set to 800mm.

