


各部分炮衣安装方法:

1. 将遮光罩扣在桌面上, 取①号炮衣对准按钮位置, 用力将炮衣套入。(炮衣采用防滑内衬, 尺寸偏紧, 请耐心安装)

Installation Instructions:

Place the lens hood on a flat surface.

Align the lens cover ① with the corresponding button location and firmly slide it into place.

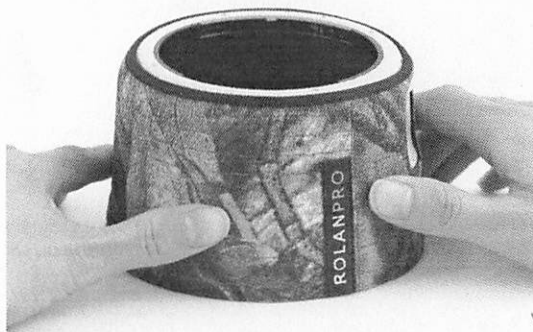

2. 将塑料膜裹在变焦环橡胶圈上, 取③号炮衣向下套入, 让缺口对准标尺刻度。Wrap the plastic film around the zoom ring. Slide the lens cover ③ from the front of the lens towards the zoom ring.



3. 捏住炮衣下端, 抽出塑料膜。Pinch the bottom of the lens cover, and pull the plastic film out.



4. 取下支架环。将④号炮衣由镜头尾部套入到阻尼环。Remove the tripod collar ring. Slide the lens cover ④ from the rear of the lens towards the damping ring.



5. 将⑤号炮衣套入, 注意对准开孔。Slide the lens cover ⑤ from the rear end of the lens, ensuring that the two openings align with the switches.



6. 将⑥号炮衣套入到对焦环上。Slide the lens cover ⑥ from the rear end of the lens towards the focus ring.



7. 装回支架环, 将⑦号炮衣套在支架环上。After attaching the tripod collar ring, start by inserting the base cover simultaneously into the base. Then cover the tripod collar ring.



8. 将⑧号炮衣套在功能环上, 安装完成。Slide the lens cover ⑧ from the rear end of the lens.

