


1. Put ① on the lens hood.



2. Move the Tripod collar away and put ② from the tail-end on the head-end.

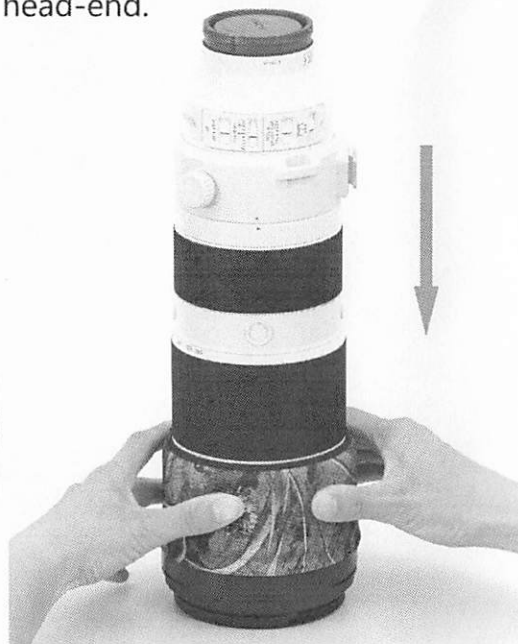

3. Put ③ from the tail-end on the zoom ring.



4. Put ④ between zoom ring and focus ring, keeping the three holes on the cover are just on the position where the commonly used buttons are, and adhere the Velcro tightly.



5. Wrap the focus ring with ⑤, and adhere the Velcro tightly.



6. Make the open of ⑦ align with control board, then wrap the coat on the tail-end.



7. Wrap ⑥ on the Tripod collar ring, making the knob, strap buckles and pedestal exposed form the opens.



8. Coating completed.

